



DIGITAL ELECTRONIC LOCK W/KEY OVERRIDE
OWNER'S MANUAL

MODEL NO: FF3085

SERIAL NO: _____

FACTORY _____
COMBINATION _____

---INITIALLY TEST THESE INSTRUCTIONS WITH DOOR OPEN---

- STEP 1. Remove battery cover and insert 4 AA batteries. Follow the diagram on the battery tray for proper battery alignment. See "Changing Batteries" in this manual for location of battery door and removal and replacement methods. Use only new alkaline batteries such as Duracell or Energizer.
- STEP 2. Insert Silver Key into hidden key hole (battery compartment area), with teeth at the 9 o'clock position. Turn key clockwise ↻ to activate electronics. Remove Key.
- STEP 3. Turn HANDLE completely clockwise ↻ to initialize the lock.
- STEP 4. Enter Factory Combination, each successful entry will be signaled by a beep.
- STEP 5. Turn HANDLE counterclockwise ↻ and open safe door. For security, the handle must be turned while the green light is on or the lock will reset. If lock resets, go to Step 3.
- NOTE: Press the "Clear" button if a mistake is made during entry. Step 3 is critical to proper operation of lock.

OPERATION OF YOUR FF3085 E-LOCK

COMBINATIONS: Your electronic safe as been programmed to operate in three opening modes.

1. The factory combination may be used at any time to access your safe.
2. Your own personally selected combination may be entered and used.
3. Your own personally selected valet code may be entered and used.

I. FACTORY COMBINATION

The factory pre-set combination is printed on the front page of the manual that came with your new Fire Fyter Safe. The FACTORY COMBINATION will ALWAYS open your electronic safe, so be careful divulging this code. A PERSONAL COMBINATION and/or a VALET COMBINATION is recommended to be programmed.

II. PERSONAL COMBINATION

To enter your own personally selected combination:

1. Push the "PROGRAM button the your keypad and the green light will light up.
2. Press the numbers of the factory combination...The green light will remain illuminated.
3. Enter in your own personal combination. The green light will remain illuminated until ALL 5 digits are pressed.

Your personal combination can be changed at any time by following the above three steps.

III. VALET CODE

The convenience of a valet code can be used when you want to allow another person to use your safe without divulging your factory combination or personal combination. The valet code can be erased at any time.

To enter your own personally selected valet code:

1. Push the "program" button on the keyboard. The green light will light up.
2. Push the "program" button a second time. The green light will again light up.
3. Enter in your personal combination (from Sec. II). The green light will stay illuminated.
4. Enter in your own selected valet code. A code of 00000 is not a valid valet code. After all 5 digits of your valet code are entered, the green light will go out.

Your valet code is now operational. To erase and enter a new valet code, follow the above four steps.

To eliminate a valet code:


1. Press "Program" twice.
2. Enter your personal combination (Sec II)
3. Press 0-0-0-0

IMPORTANT: ALWAYS TEST ALL COMBINATIONS SEVERAL TIMES WITH THE DOOR IN THE OPEN POSITION. Please call the factory if you have any questions or problems with your E-lock. Se habla espanol en la factoria.

NEVER USE FORCE ON THE LOCK OR HANDLE

CHANGING BATTERIES

Change batteries by inserting the tip of any small key into the small hole at the bottom center of the battery cover. Twist the key. The cover will pop off and the battery will drop down. Replace the 4 AA batteries according to polarity. Raise the battery tray back into position. Hook the top of the battery cover into the top of the opening. Swing the bottom of the cover up; lifting and snapping into position with one motion.

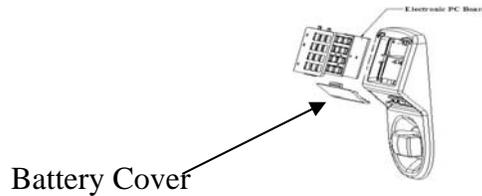

SECURITY KEY OVERRIDE

An emergency key lock override is located inside the battery compartment. There is a small round hole leading to a security key lock that is not visible. Insert the special security key with the teeth in the up-right position. Feel the key go fully into position. Turn the key counter-clockwise holding the key in that position while you turn the handle. Pull the safe door open.

INDICATOR LIGHTS

GREEN LIGHT – With a Beep sound

The green light is accompanied with a single beep when:

1. A correct opening digit has been pushed.
2. The “clear” button is pushed.
3. The “program” button is pushed

RED LIGHT

The red light is accompanied with three beeps when:

1. An incorrect combination has been pushed.
2. More than five seconds elapse between pushing individual combination digits.
3. The “program” button has been pushed out of proper sequence.

GREEN LIGHT – With NO BEEP SOUND

The green light with no beep sound will light up when:

1. A correct combination has been entered – the green light will stay on for four seconds.
2. When entering a personally selected combination after the factory combination has been entered.
3. When entering a valet code after the personally selected combination has been entered.

YELLOW LIGHT

The yellow light indicates a low battery condition. When the yellow light comes on, the batteries should be replaced.

SECURITY DELAY

The electronic lock is programmed to automatically “lock out” for 2 minutes when a wrong combination is entered three consecutive times. During this security delay, the red light will signal when any button is pushed.

UPRIGHT OPERATION

The safe must be used in the upright position to ensure proper function of the built-in, tamper proof devices.

SPECIAL PACKAGING

Because your safe will release moisture to create an effective heat barrier should fire strike, articles susceptible to moisture damage require special care. Stamps, coins, photographs, etc. Should be placed in a well-sealed humidity-resistant container, packet or heavy (boil proof) sealed plastic bag to prevent moisture damage.

NOTE

The combination to your safe is registered at the factory. If lost, the factory combination can be obtained by sending the serial number and a notarized statement of ownership to the factory. There is a non-refundable service charge for obtaining replacement combinations. The serial number tag for this safe is located on the outside of the safe, on the right side, near the top hinge.



Center Manufacturing Company

540 Goodrich Road

Bellevue, OH 44811

www.FIREFYTER.com

Phone: 419-483-4852 Fax: 419-483-0070